


Arm Posts

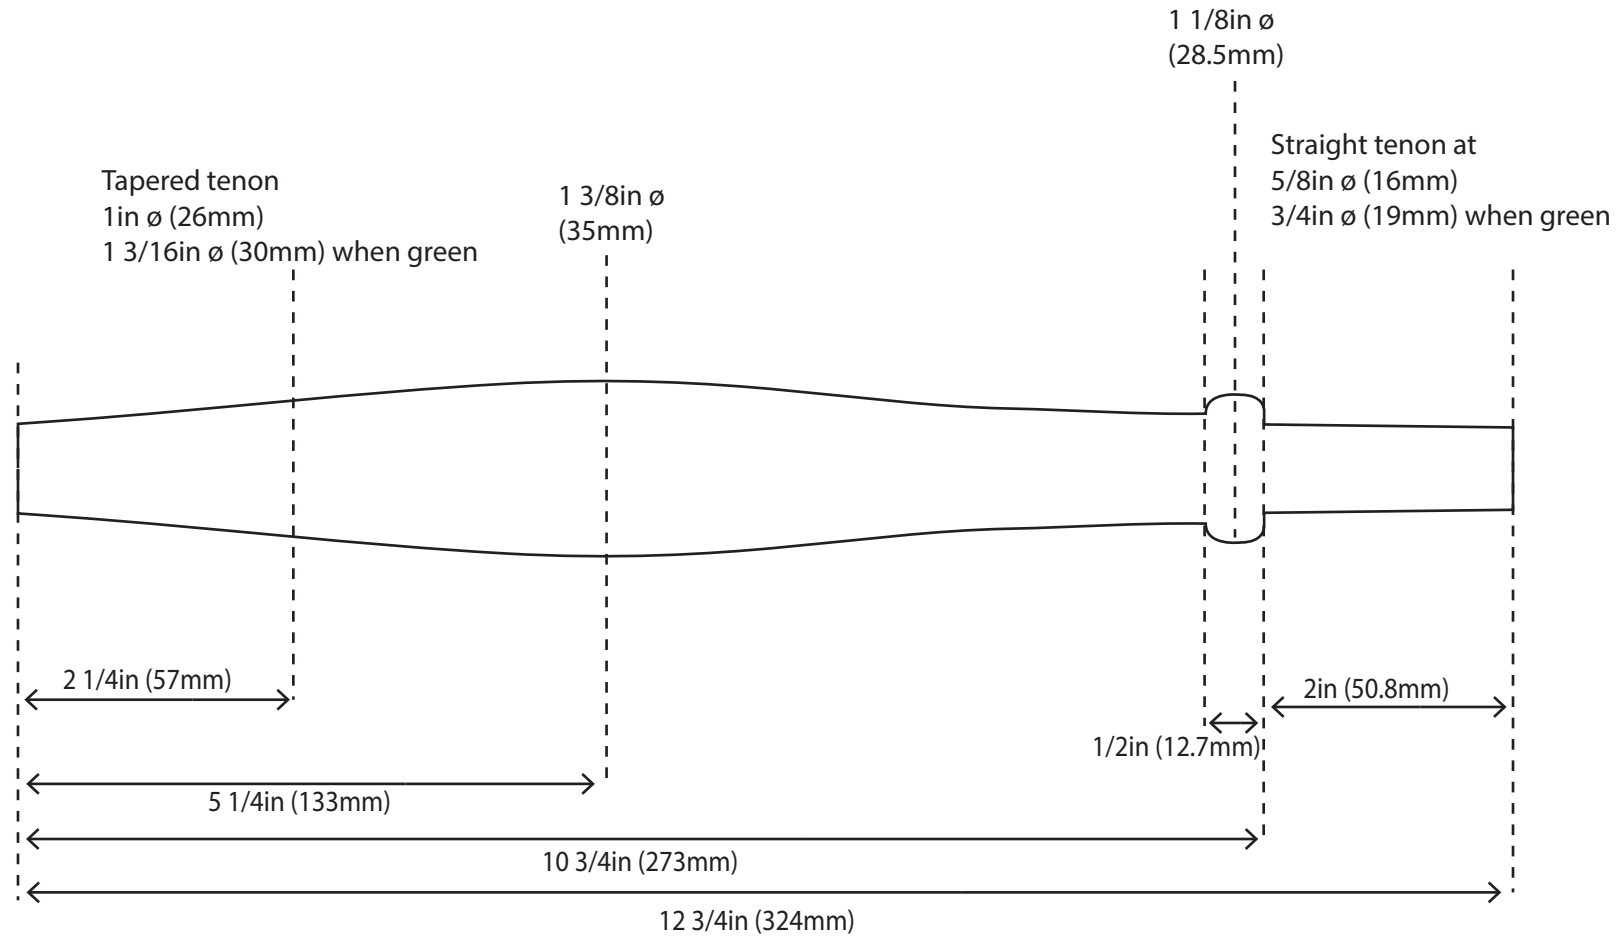

*Turn all components oversize whilst green. Final sizing is done once components have finished drying.