


Centre Stretcher

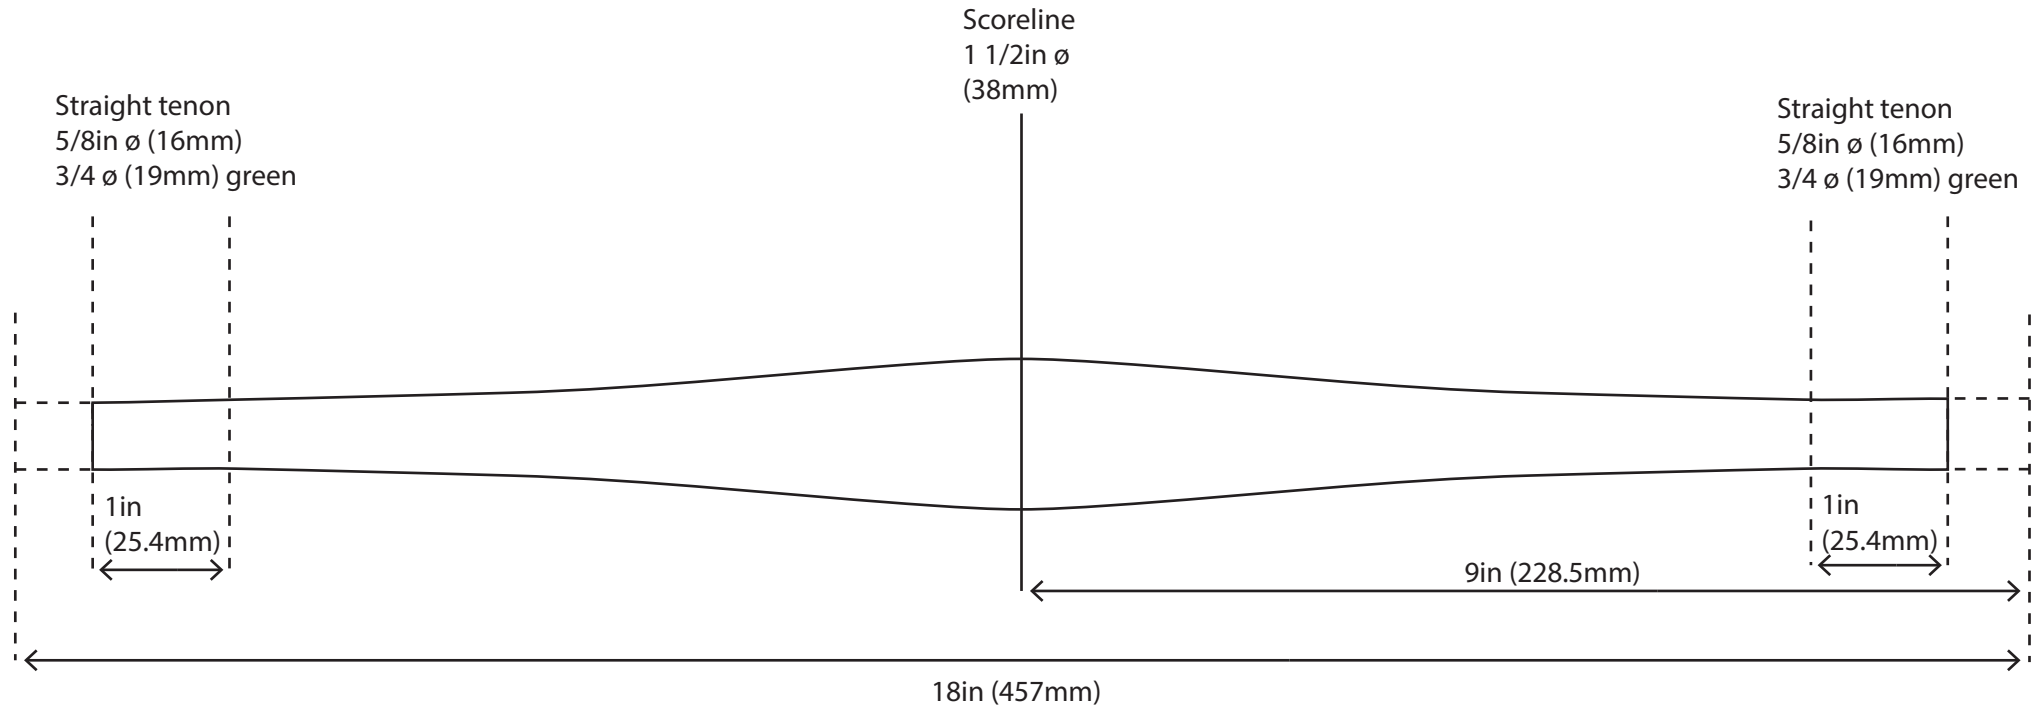

Turn oversive at 18in - Final length, and position of scoreline, are determined during fitting.

*Rough shape the stretchers whilst green, before drying. Final sizing is done when fitting undercarriage, once the pieces have finished drying.