



Arms

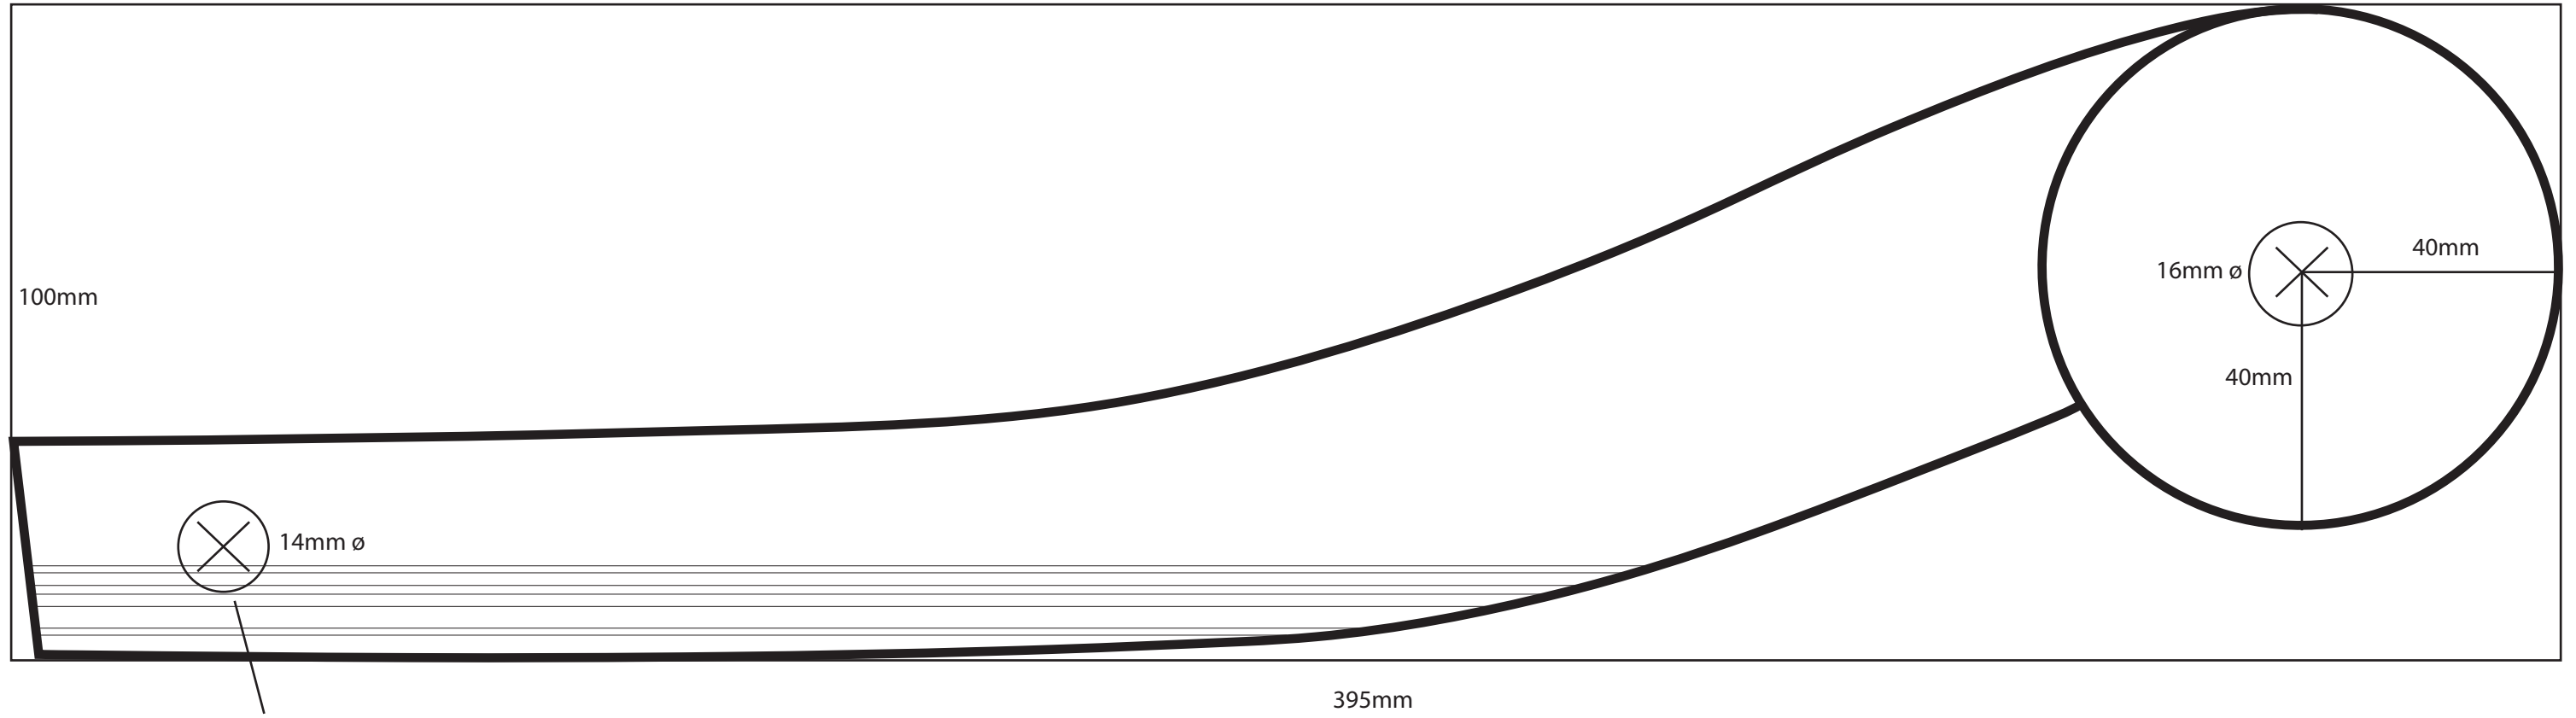

Do not drill this hole until you know it's exact location and angle, which is determined during the final assembly of the chair.

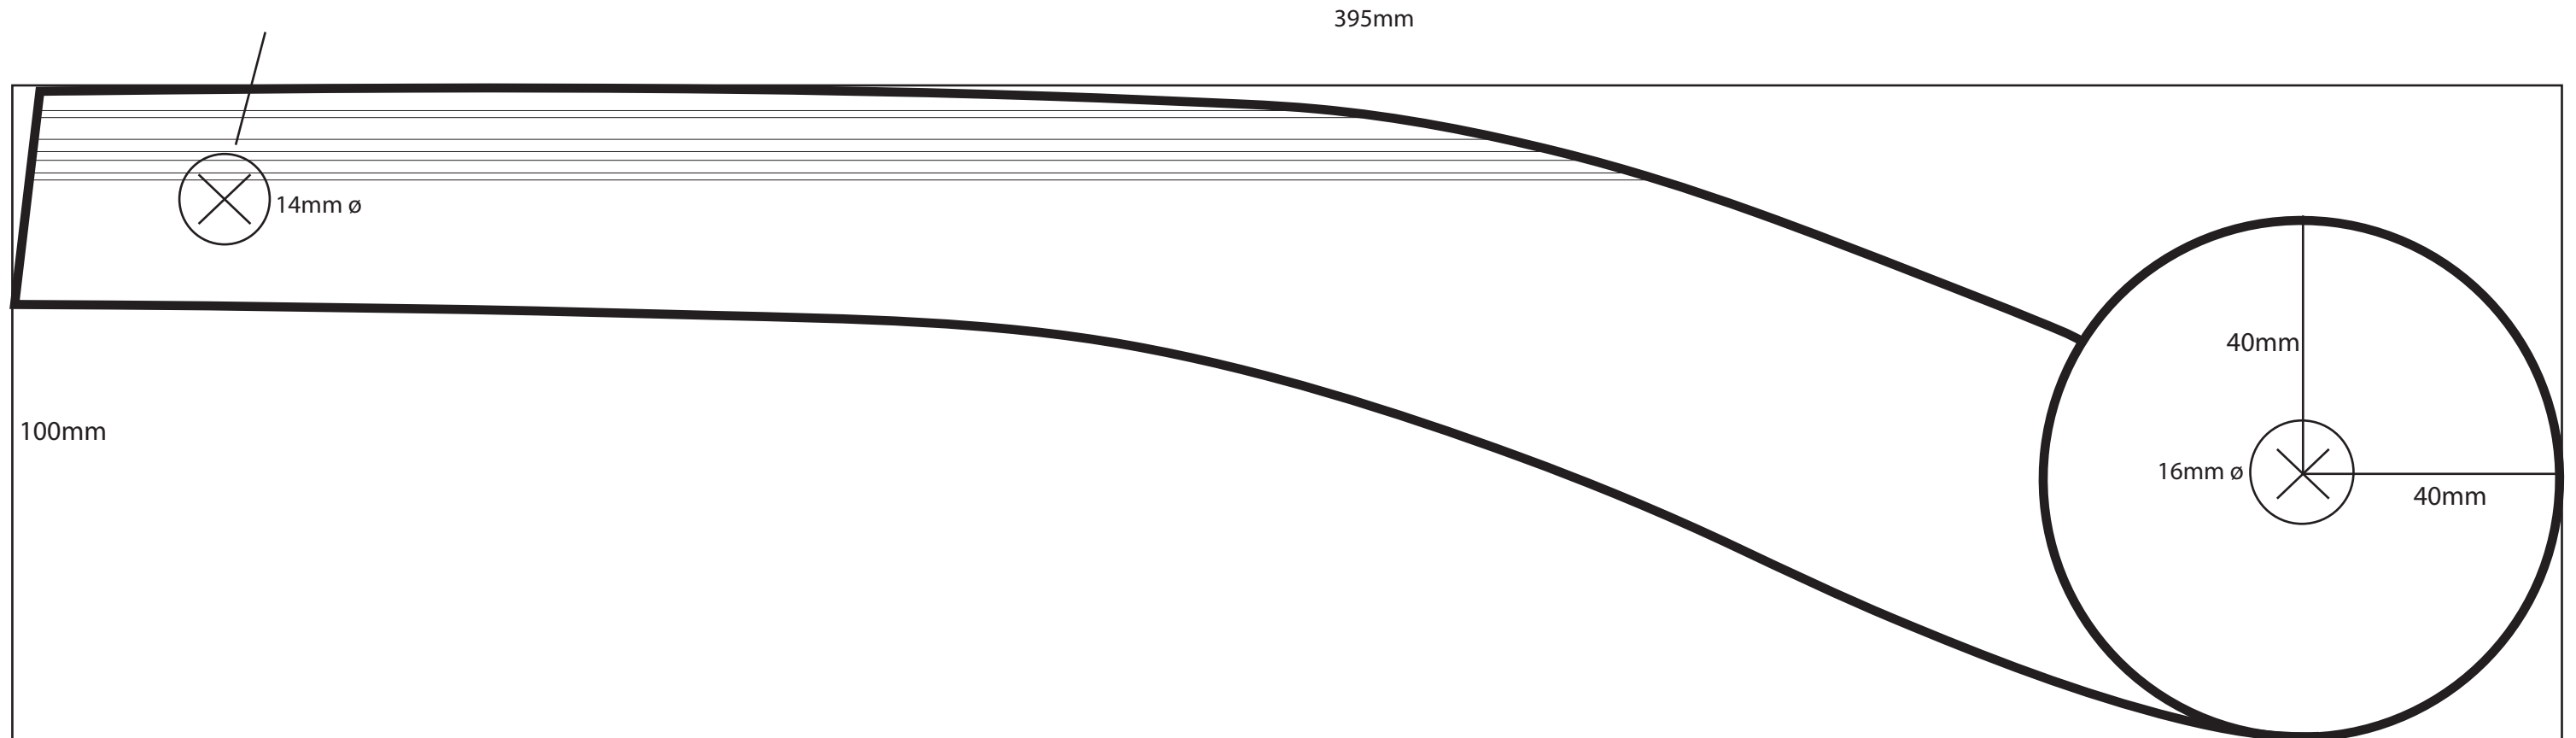

We recommend leaving some extra length, to be sawn down to size during the final assembly of the chair.